

JOHNNY JOINT®

PERFORMANCE ROD ENDS

CE-9112A & CE-9112G GM A&G BODY JOHNNY® JOINT AXLE HOUSING KITS INSTALLATION INSTRUCTIONS & TECHNICAL MANUAL



Fits

CE-9112A Fits: 10 & 12 bolt housings in 64-72 GM A-body cars
CE-9112G Fits: 10 bolt housings in 78-87 GM G-body cars

Kit Includes

- 2) Specially machined 2" Johnny Joint® rod ends for upper differential housing ears
- 2) Greasable bolts
- 1) Installation tool


Tools Needed

- Big Hammer



Instructions

- 1) After removing the stock bushing and steel bushing outer sleeve, thoroughly clean the bushing hole. Index the Johnny Joint® into the hole from the outside of the ear headed in.

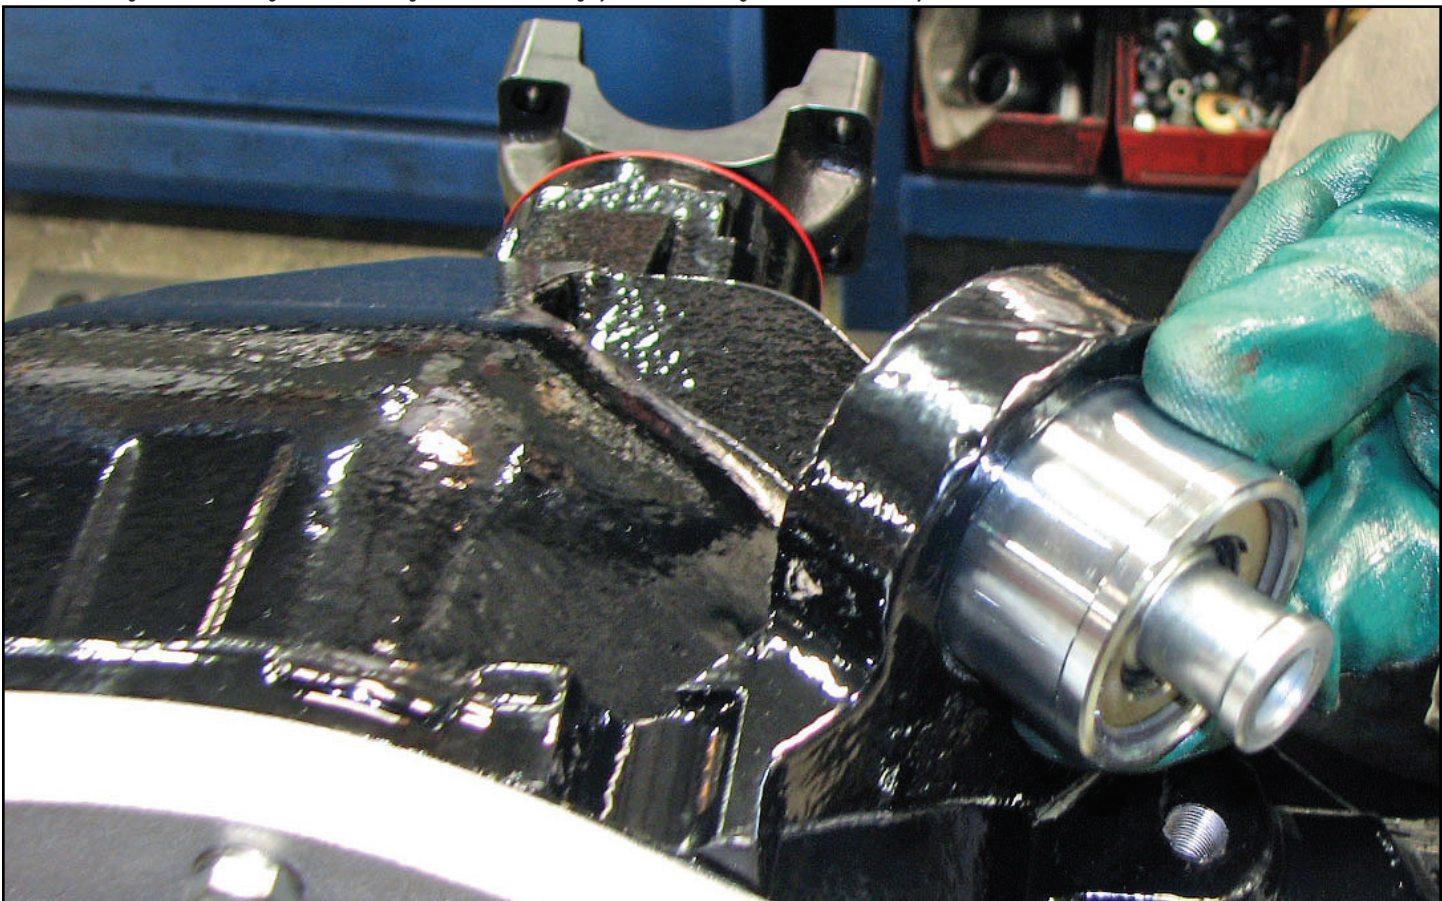

@RockJock4x4


/RockJock4x4

/RockJock4x4byJohnCurrie




1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580


2) Using the supplied tool, drive the Johnny Joint® into place in the housing until it stops against the machined on stop on the Johnny Joint®.

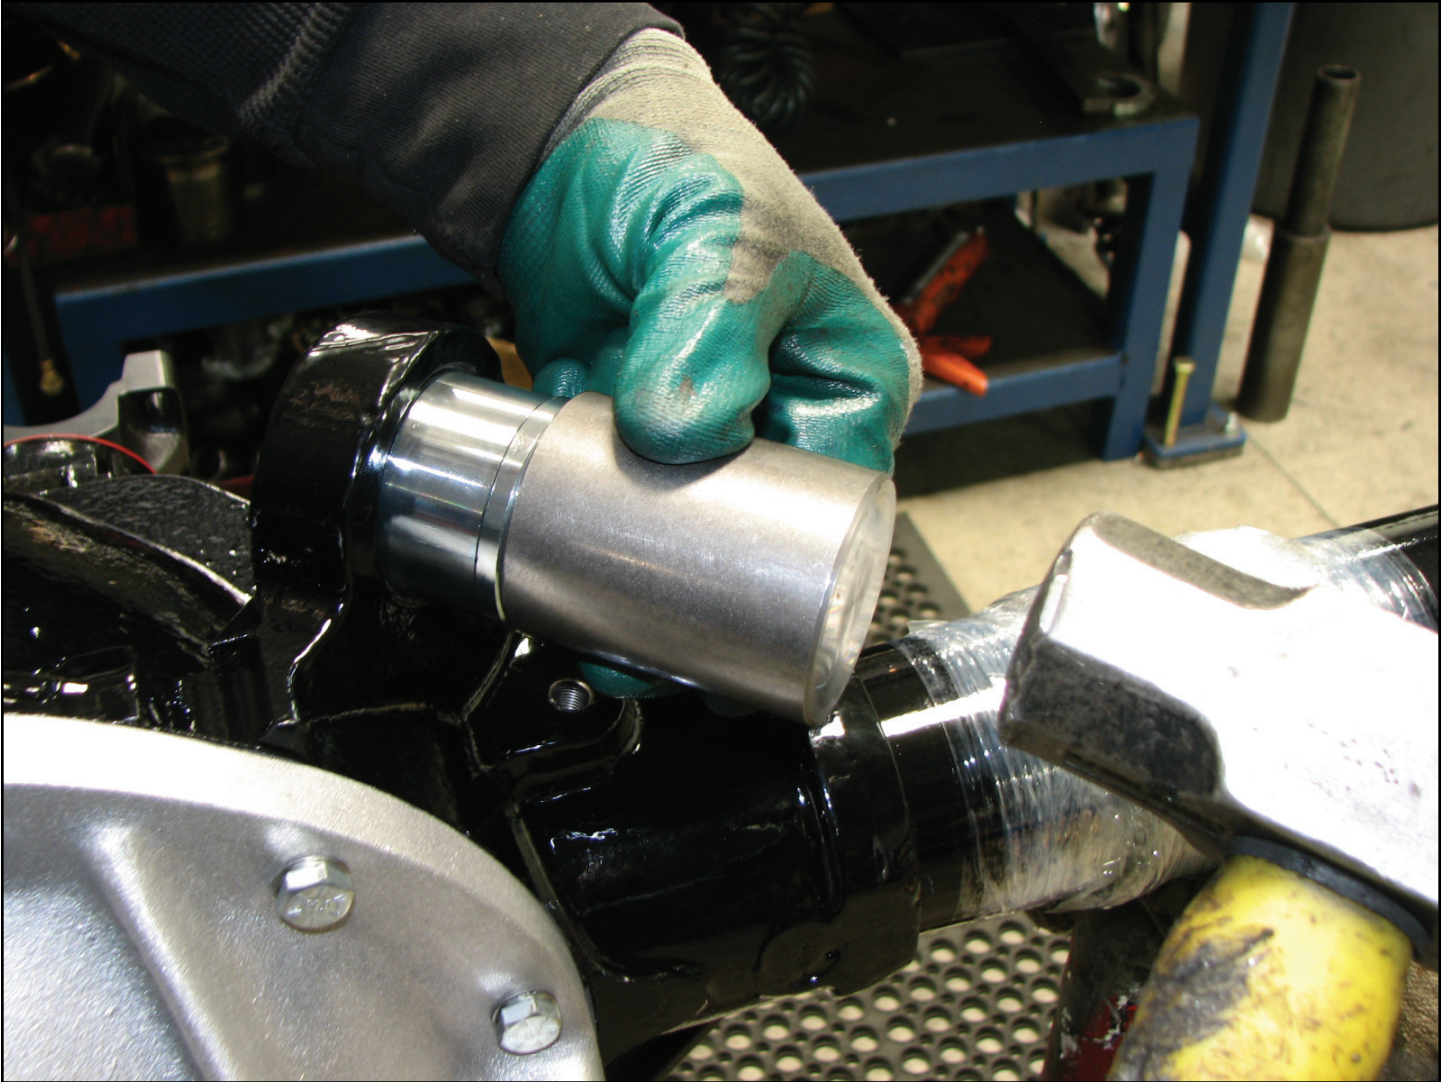

3) Reinstall the upper control arms using the supplied greaseable bolts. Grease the joints with a non-synthetic moly lube.

 @RockJock4x4

 /RockJock4x4

 /RockJock4x4byJohnCurrie

 **ROCK
JOCK** BY JOHN
CURRIE

1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580